

# **FTSTR/RSTR Installation Instructions**

## A) <u>Preparation for Installation Using the PST Anchor</u>

#### 1) Know the parts and tools

- Anchor: 2" square, 12-ga galvanized perforated steel tube.
- **Driver head:** Standard steel driver head for the tube.
- **Driver:** Manual or powered post driver. Use a level while driving to keep it plumb.
- Pins & cotter / Bolt: To lock the hinge/post in place.

#### B) Drive the Anchor

- 1) Pick your spot, avoid utilities/rock when possible.
- 2) Drive the square tube straight down. Keep it level.
- 3) Stop with about 1 inch of tube above grade, you need that stub to receive the joint.

## C) Seat the Post w/ STR Hinge

- 1) Slide the STR Hinge fully into the square tube anchor.
- 2) Pin It
- 3) Insert the pin through the aligned holes and secure with the cotter.

### D) Final Check

- 1) Ensure the post stands vertical and the reflective sheeting faces traffic.
- 2) Check that the base/joint doesn't rock or twist.

### E) Important Notice To Purchaser

The following is made in lieu of all warranties, expressed or implied, including the implied warranties of merchantability and fitness for purpose: Seller's and manufacturer's only obligation shall be to replace such quantity of the product proved to be defective. Before using, user shall determine the suitability of the product for it's intended use, and user assumes all risk and liability whatsoever in connection therewith. Neither manufacturer nor seller shall be liable either in tort or in contract for any loss or damage, direct, incidental, or consequential, arising out of the use of or the inability to use the product.